



Mixels

41555


MC
PD




LEGO.com

6150682

1

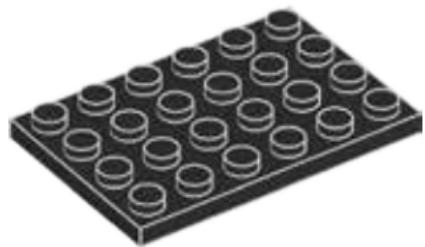


2

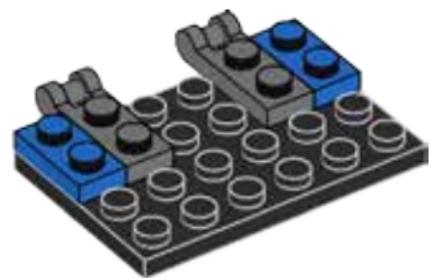


2


3

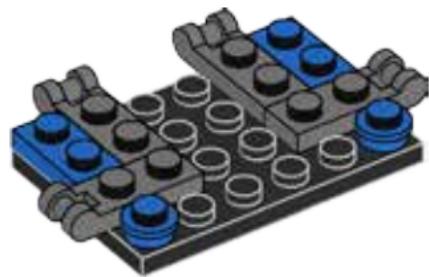



4

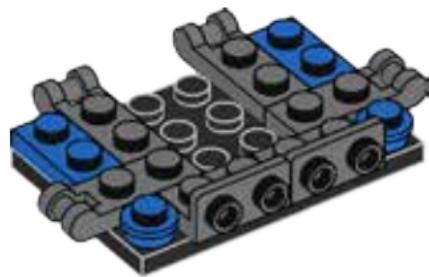

5

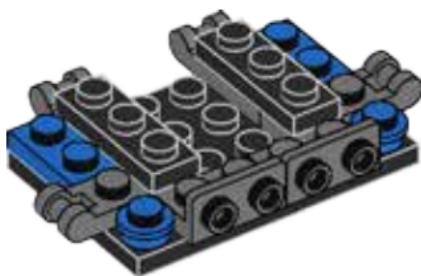


6

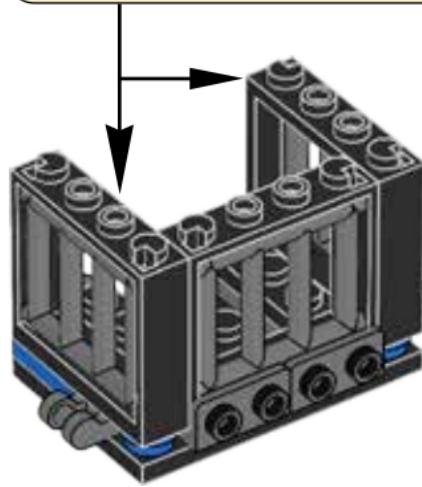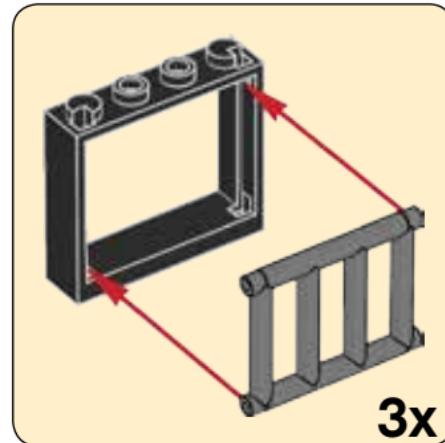


6


7

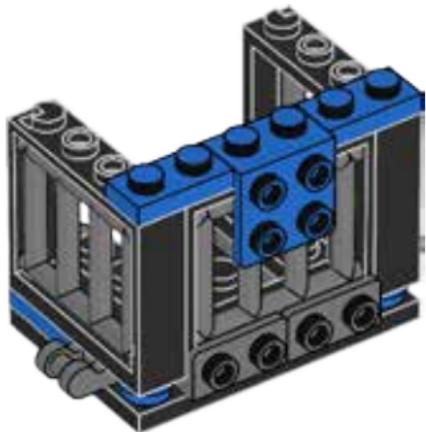


8

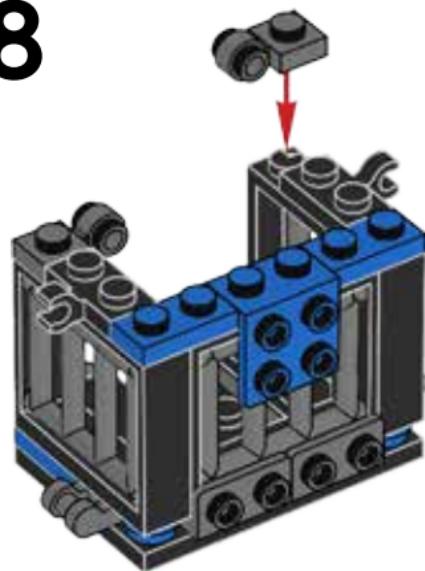


9

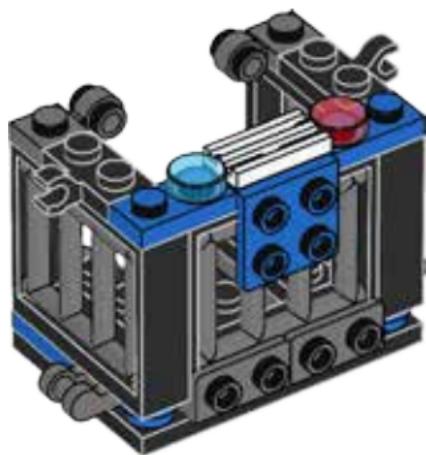

10

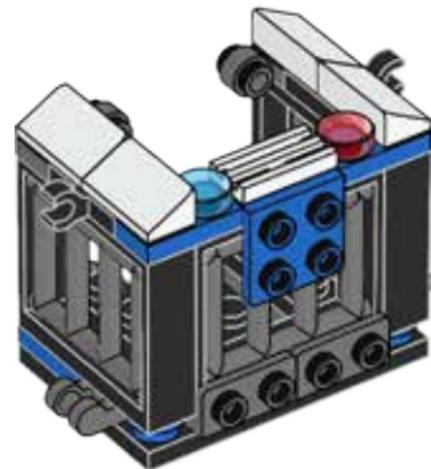


11

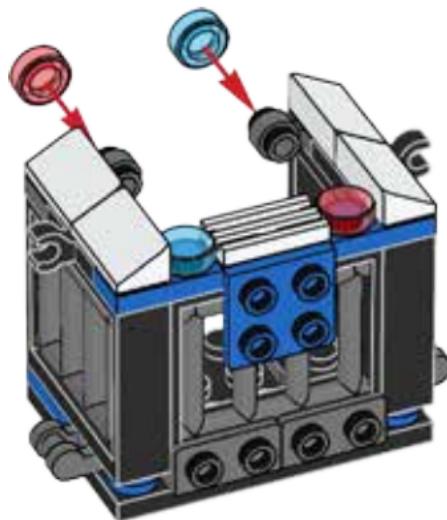


1




2

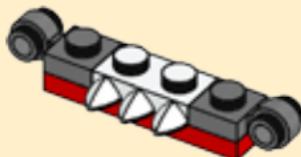


3

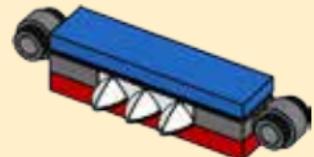


12

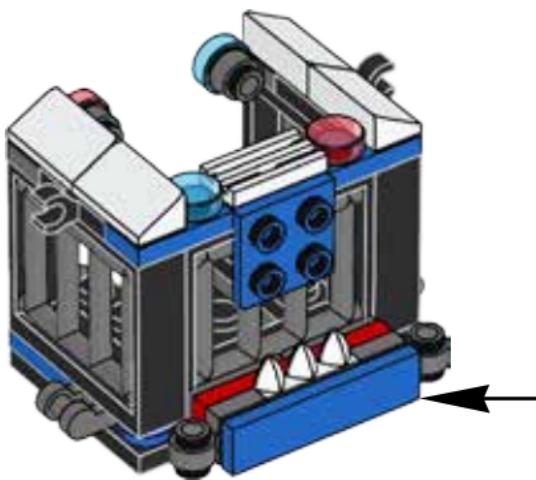



13

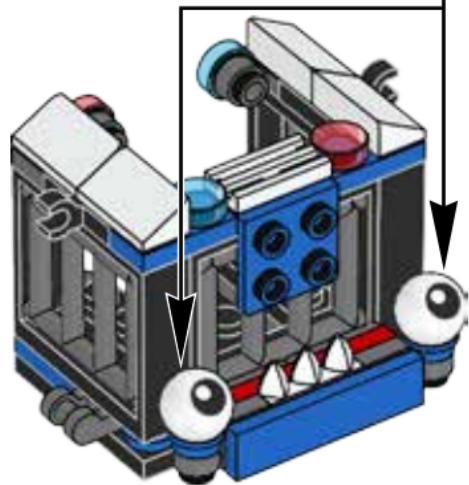



14

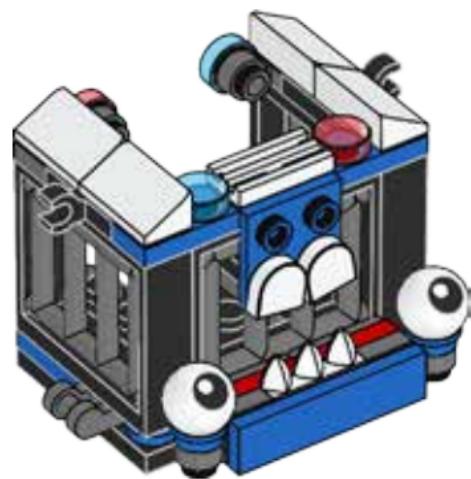



15

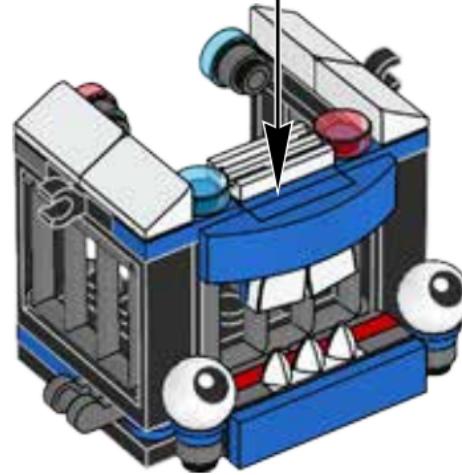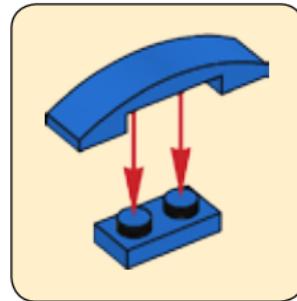



16

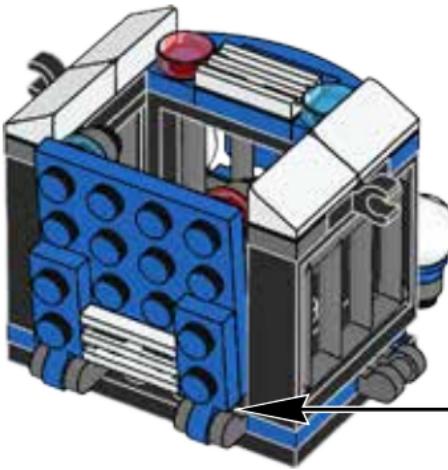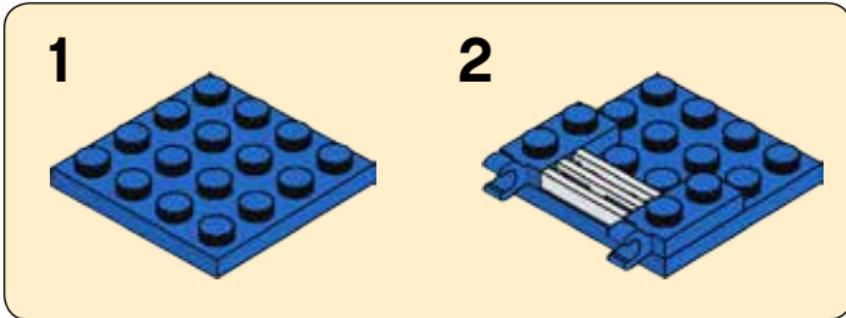

17

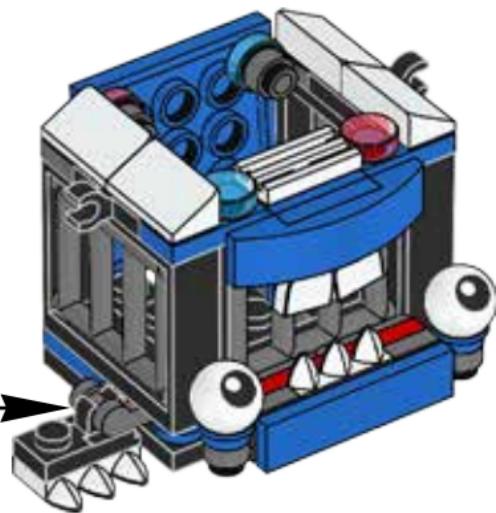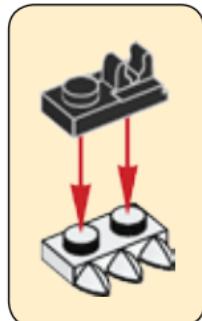


18

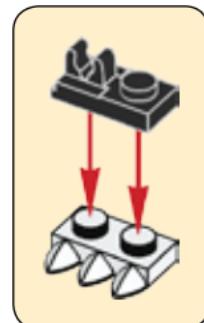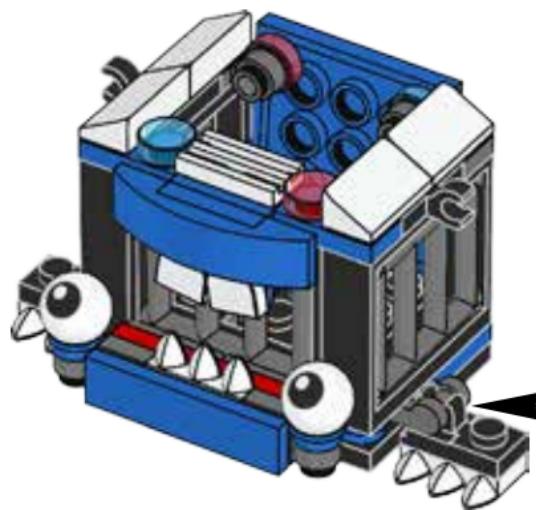





19

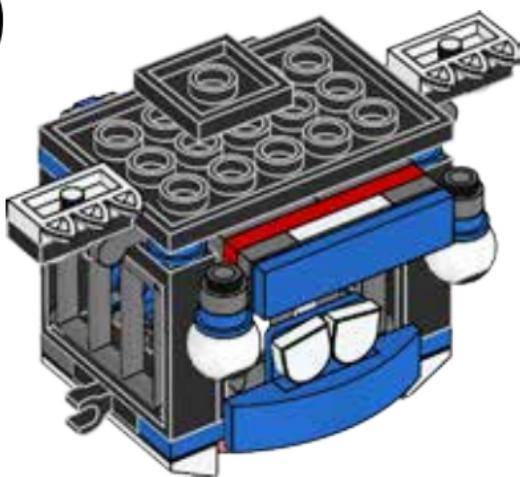

20

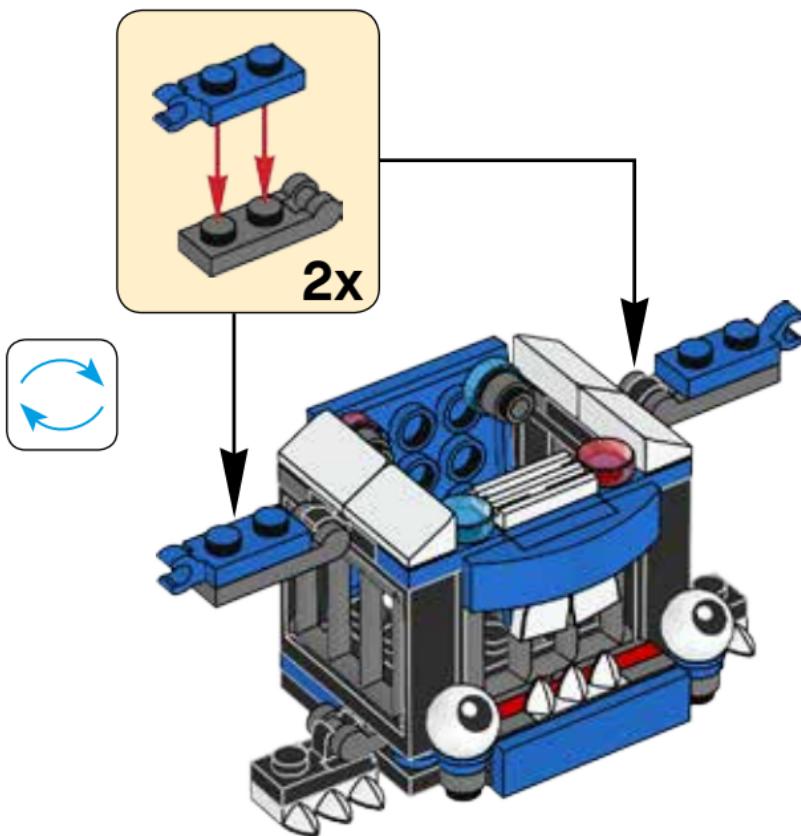


21

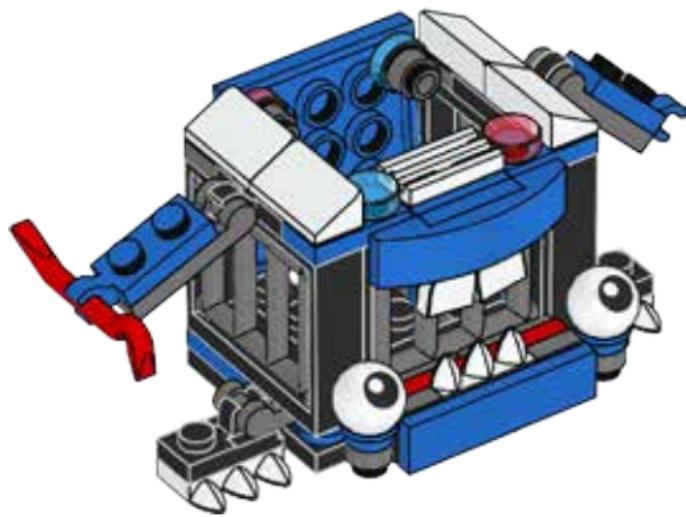




1




2



3

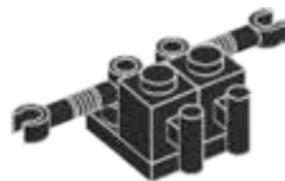

4

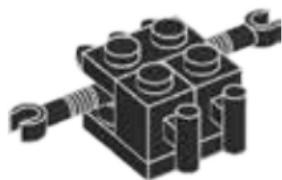

5



6





Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :

1-800-422-5346 :



KUFFS
41554





BUSTO
41555



TIKETZ
41556



**MCPD
MAX!**

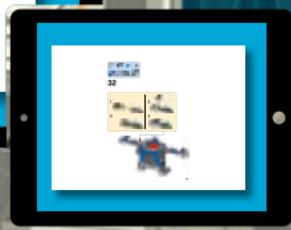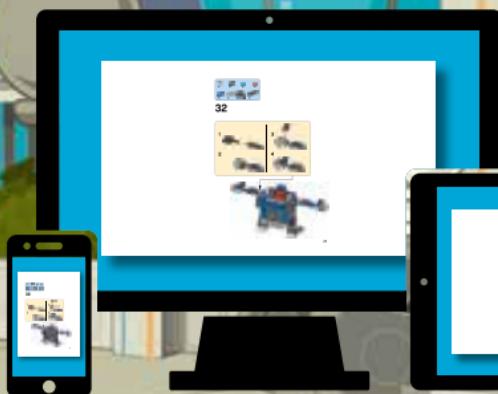

LEGO.com/mixels



LEGO
SERIES
7

WELCOME TO
MIXOPOLIS



PALADUM
41559



CAMILLOT
41557



TAPSY
41561



TRUMPSY
41562



TAPSY
41561



TIKETZ
41556



KUFFS
41554



MIXADEL
41558



Mixels

WELCOME TO
MIXOPOLIS

